

Door Locks

n Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

Using the entry function or wireless remote control (→P:10, 11)

n Rear door child-protector lock




Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

n Door closer (if equipped)

If a door is left slightly open, it will close automatically.

Power Windows

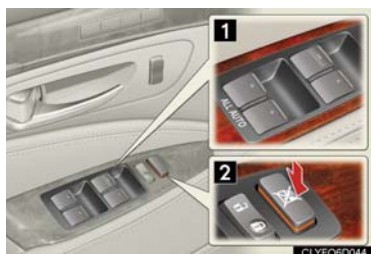

1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof

n Opening and closing



1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

n Tilting up and down



1 Tilts up

2 Tilts down

Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.
After the cap is removed, it can be hung on the inside of the fuel filler door.

Trunk

n Opening the trunk



► Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.



To disable the trunk opener, turn off the main switch in the glove box.

1 On

2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

► Entry function and wireless remote control (→P.10, 11)

n Trunk easy closer

If the trunk lid is left slightly open, it will close automatically.

n Trunk closer switch (if equipped)



Pressing the switch closes the trunk lid automatically.